BETRIEBSANLEITUNG
OPERATING INSTRUCTIONS
INSTRUCTIONS DE SERVICE
ISTRUZIONI D'USO
HANDLEIDING
INSTRUCCIONES PARA EL MANEJO
MANUAL DE INSTRUÇÕES
NAUDOJIMOSI INSTRUKCIJA
KASUTUSJUHEND
LIETOŠANAS INSTRUKCIJA
DRIFTSINSTRUKS
DRIFTSINSTRUKTIONER
DRIFTSVEJLEDNING
INSTRUKCJA OBSŁUGI

KEZELÉSI ÚTMUTATÓ
NÁVOD K OBSLUZE
NAVODILO ZA UPORABO
NÁVOD NA OBSLUHU
UPUTE ZA RAD
MANUAL DE OPERATII
TREORACHA OIBRIÚCHÁIN
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ
EL KITABI
ИНСТРУКЦИИ ЗА ЕКСПЛОАТАЦИЯ
ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ
取扱説明書
사용설명서
使用说明书

VT 4.16

MAKE IT BECKER.

BECKER

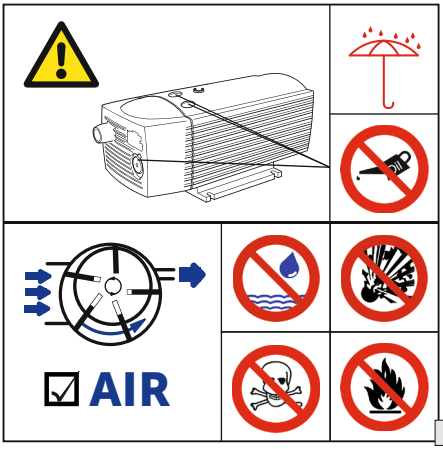
AIR
1

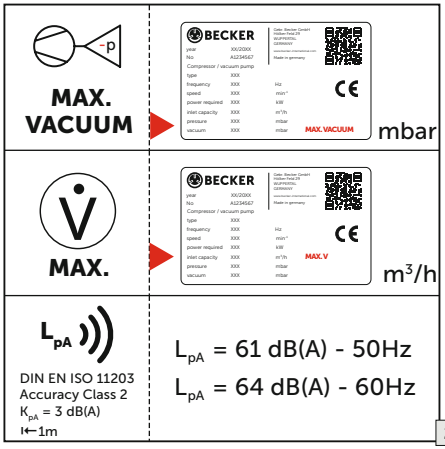
MAX. VACUUM
mbar
MAX.
m³/h
DIN EN ISO 11203
Accuracy Class 2
K pA = 3 dB(A)
1m
L pA = 61 dB(A) - 50Hz
L pA = 64 dB(A) - 60Hz
2

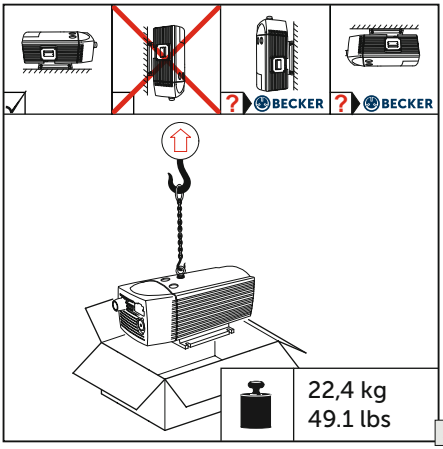
22,4 kg
49.1 lbs
3

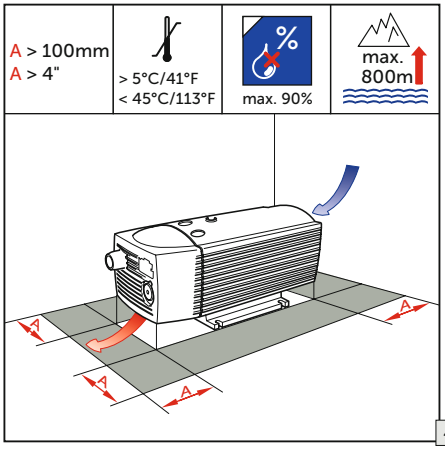
A > 100mm
A > 4"
> 5°C/41°F
< 45°C/113°F
max. 90%
max.
800m
4

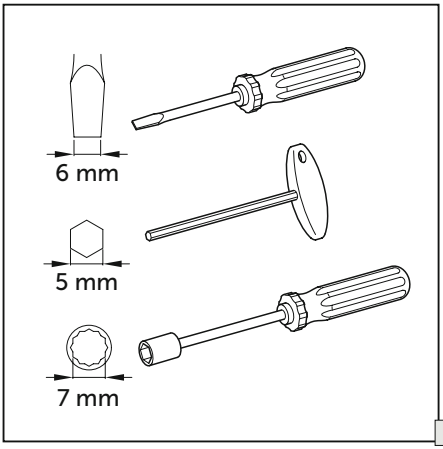
6 mm
5 mm
7 mm
5

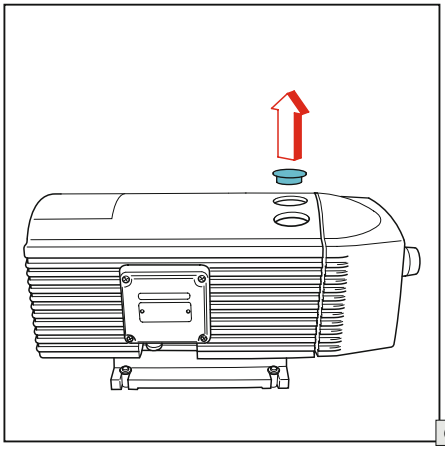
6

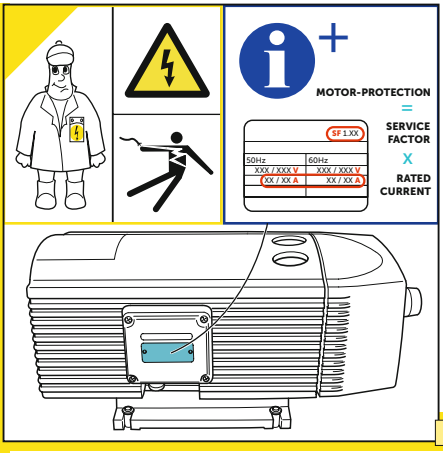
MOTOR-PROTECTION
=
SERVICE FACTOR
X
RATED CURRENT
SF 1.XX
50Hz
60Hz
XXX / XXX V
XXX / XXX V
XX / XX A
XX / XX A
7

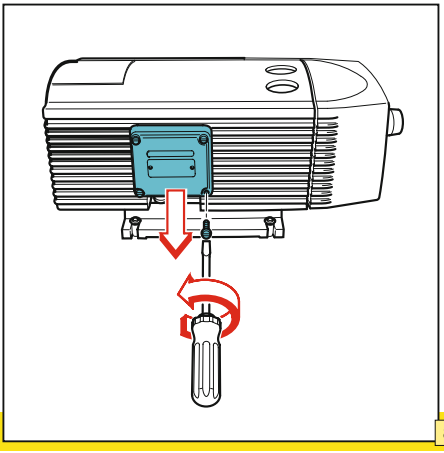
8

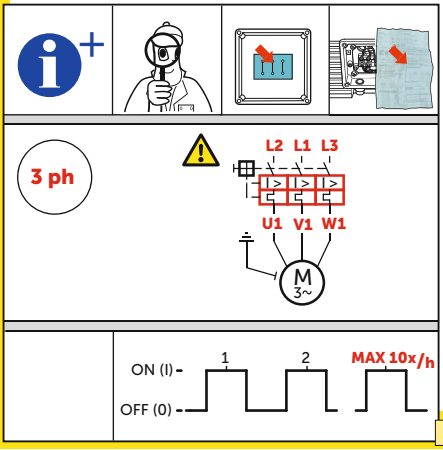
3 ph
L2 L1 L3
U1 V1 W1
M
3~
ON (I)
OFF (0)
1
2
MAX 10x/h
9

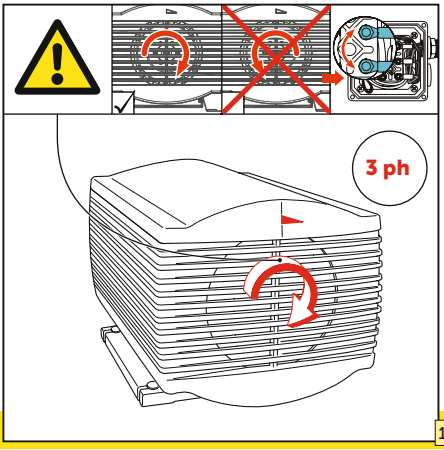
3 ph
10

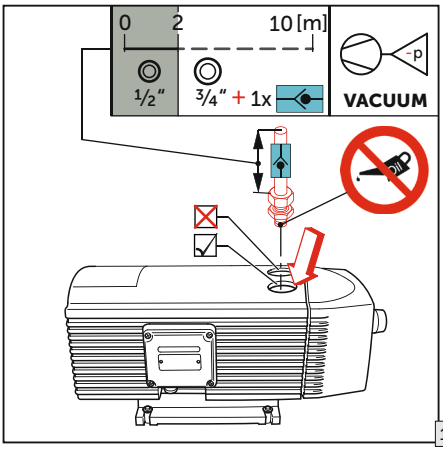
0
2
10 [m]
1/2"
3/4" + 1x
-p
VACUUM
11

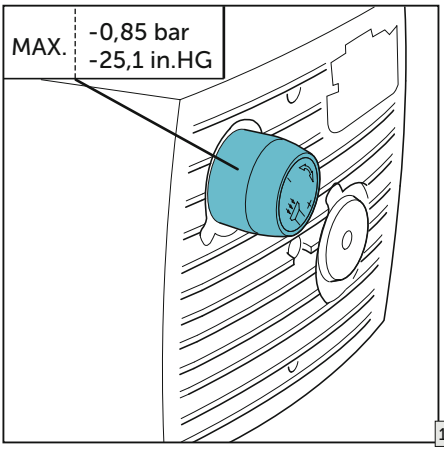
MAX.
-0,85 bar
-25,1 in.HG
12

Maintenance

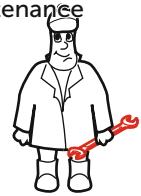

13

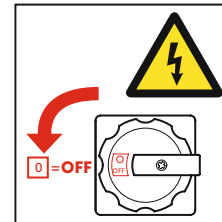

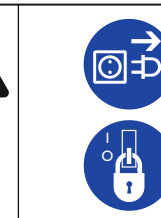

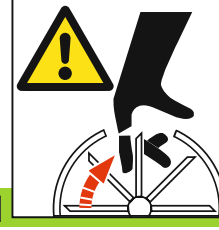

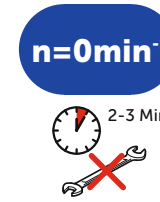

14

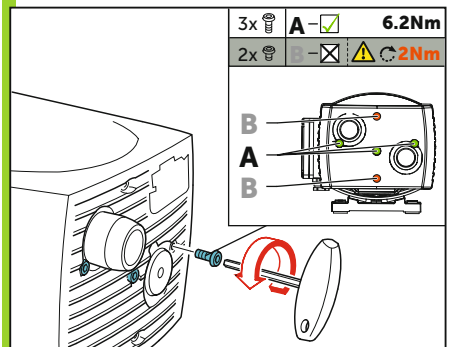

15

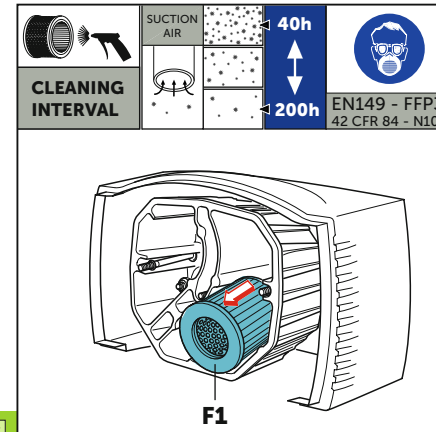

16





F1: D: 58 mm
H: 40 mm
No.: 90951900000

17

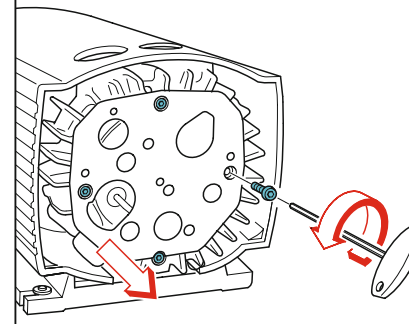

18

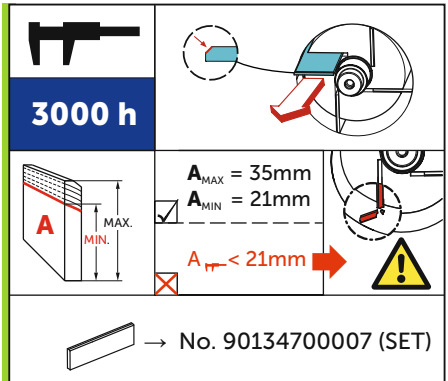

19

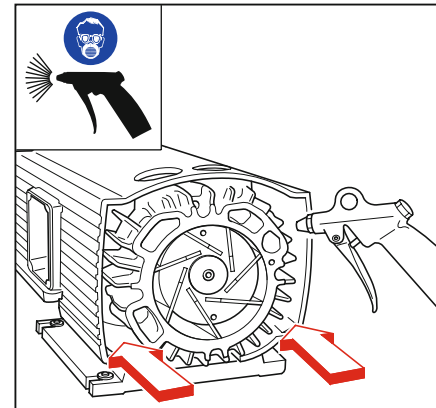

20

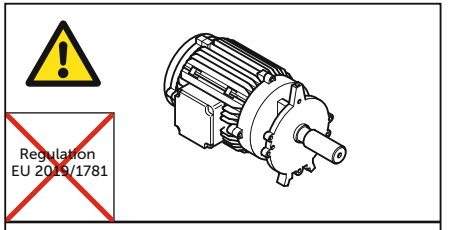

This pump falls under an exemption from EU 2019/1781 as the motor and the pump have common parts.

21

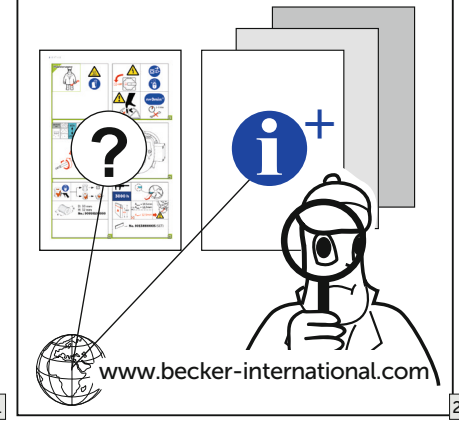

22

WWW.BECKER-INTERNATIONAL-SHOP.COM

Gebr. Becker GmbH
Hoelker Feld 29-31
42279 WUPPERTAL
GERMANY
info@becker-international.com
www.becker-international.com

BECKER

28100027402 | 2021-12-17 | All rights reserved

MAKE IT BECKER.

BECKER