

**U 5 Series:** The U 5 series vacuum models work on the principle of a positive-displacement pump that consists of vanes mounted in a rotor rotating inside of a cylinder. These vacuum models require oil to seal the gaps, to lubricate the vanes and to carry away compression heat.

**Product Description:** The Becker U 5.70, 5.100, 5.165, 5.200 and 5.300 pumps are oil-lubricated rotary vane highly efficient, thermally suited, vacuum pumps designed to operate on a continuous basis, intended for use at vacuum levels above approximately 20 in HgV (below 250 Torr) and can be operated with its inlet blanked off. Prior to handling the vacuum pump, these operating, installation and safety instructions shall be read and understood.

- Check boxes next to explanation if you have understood the information.
- Call factory for any concerns.



The U 5 series are oil lubricated vane vacuum pumps intended for suction of air and other dry inert gases. Maximum Allowed Temperature of the inlet air/inert gas - **104 deg F. (40 deg C)**  
**Ambient temperature: 32-104 deg F Ambient pressure: Atmospheric**



**Warning. Danger. Caution.** Note that ignoring notices may lead to accidents; minor, serious or fatal injuries to personnel; or may cause damage to the pump. If anything remains to be clarified, please contact your Becker Pumps representative.



The vacuum pump is set up for continuous operation, intended for suction or evacuation of the process involving air only and other dry, non-aggressive, non-toxic and non-explosive gases. Conveying higher density media leads to possible excessive thermal/mechanical load on the vacuum pump. Please consult with Becker Pumps when conveying these other vapors/media.



Liquids may not be conveyed. The use of the gas ballast counteracts the accumulation of condensates from the process gas inside the vacuum pump.




The vacuum pump should be placed in a non-potentially flammable/explosive/non-toxic environment. Therefore:



Flammable Substances may not be conveyed.




Explosive substances may not be conveyed.

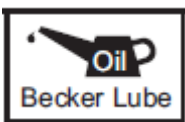


The pump is an oil lubricated rotary vane vacuum pump. **Using Becker Synthetic Oil or Becker Premium Synthetic Oil extends the warranty of the pump.**




The vacuum pump will become **very hot** during operation. This is normal. Care should be taken to let the unit cool down before maintenance. **(High temps: 175+ degrees F (79+ degrees C)**

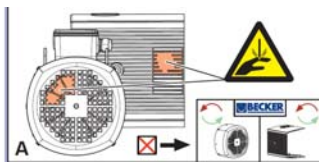

Cooling takes place by radiating heat from the surface of the pump; air flow from the fan wheel across the drive motor; air flow across/from the radiator squirrel cage fan. **Caution:** rotation of fans.

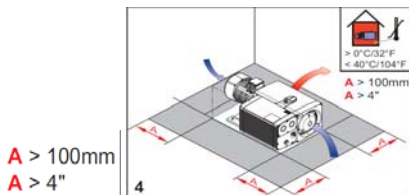

Greater than 4" (100 mm) around the pump is the distance from any object for radiant heat dissipation. Allow even more area to provide access for maintenance of the pump.

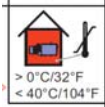

The process gas will also supply cooling to the pump. This process inlet air and the surrounding ambient air should be within temperatures between 32 deg F – 104 deg F.




**CAUTION: PROTECT YOUR WARRANTY!**  
IF YOU ARE ABOVE 2,500 FT. ALTITUDE  
CALL FACTORY BEFORE INSTALLATION.

Characteristic data from the spec sheet is valid up to 3280 ft (1000 m). Consult with Becker for corrected specifications at altitude.



Protect the pump from humidity in storage/assembly. If placing the pump outside, protect from the outside elements by a protective roof and from rodent/vermin by blocking inlets with wire mesh fencing. Working environment and process application should convey air with a relative humidity between 30-90%.


Standard	0.1/0.5 mbar [abs]
Pos. 450	No.:76875199626
Pos. 480	No.:54840054100
Optional	0.1/3.0 mbar [abs]
Pos. 450.1	No.:76875499626
Pos. 480.1	No.:94840100000
9.3	

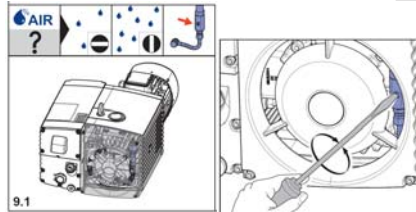


The vacuum pump comes equipped with a standard gas ballast valve. Residual condensates dilute the oil deteriorating its lubricating properties. With an adjustment of the gas ballast, ambient air is sucked into the pump chamber; counteracting the accumulation of condensates inside the vacuum pump. This method is employed during the process and at the process end, with shut-off valve closed and gas ballast open, run the pump for another 20 minutes to sweep out vapors that may be contaminating to the oil.

## SET-UP/ ASSEMBLY: Review and identify the position of the (see next page):




- Inlet port** (install piping of the vacuum line from the process to this port without restriction)
- Exhaust port** (leave open to atmosphere without restriction). Contact factory for discharge plumbing.
- Review and identify** dimensions of the pump, location of inlet filters (to avoid suction of any foreign media), the non-return valve (to avoid reverse rotation after switching off the vacuum pump), and locate the arrows that indicate correct rotation of motor/fan after electrical hook-up.
- Do **not reverse rotation** of the pump, this will spin the vanes backwards incorrectly and possibly break vanes locking the pump up. Also pressure could build up in the working chamber causing gaskets/seals to blow out.

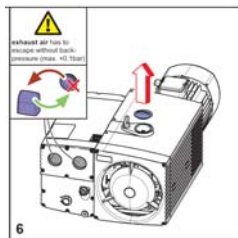

**Remove all packing materials;** cardboard/plastic covers/adhesive tape/foam from all ports and from the outside of the pump. Exhaust air must escape without back-pressure: not to exceed 1.5 psig (0.1 bar). Do not block exhaust air ports.

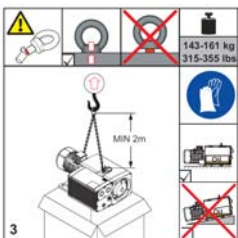

Make sure the eyebolts are fully screwed in. The position of the eyebolts fit to the center of gravity of a pump including the drive motor. If a pump without motor is to be lifted, attach another belt/rope at a suitable point. Lifting chain should be positioned a minimum of 2 meters. **Caution:** Do not tilt vacuum pump that is already filled with oil which can cause the oil to ingress into the cylinder.

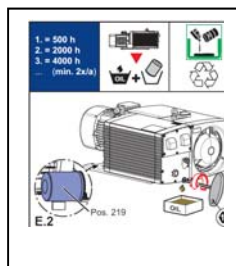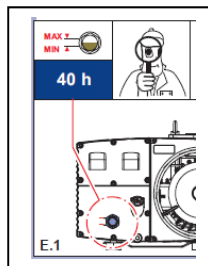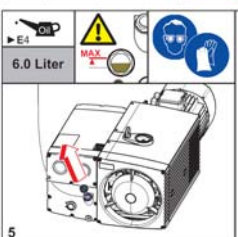

Oil should be filled to the middle of the oil sight glass between the marking of **MAX** and the **MIN** line. Check oil level every 40 hours. Maintain oil and oil filter with initial check at 500 hours and every 500 hours thereafter, determining a maintenance schedule. The minimum of twice per year maintenance is recommended.

**Oil Capacity of each model pump:**  
 U 5.70 and U 5.100 = 2 liters (0.5 gallons)  
 U 5.165 and U5.200 = 5 liters (1.32 gallons)  
 U 5.300 = 6 liters (1.59 gallons)

**Using Becker Synthetic oil extends the warranty of the pump!**



The pump is intended for industrial use. It shall be handled only by qualified personnel. Only qualified personnel shall transport, store, install, commission, maintain, troubleshoot, and overhaul the pump. The installation of the pump should be observed both by the manufacturer of the machinery into which the pump will be incorporated and by the operator. Marked operations may only be executed by qualified electricians.




**Follow all safety notes/warnings.**

Always wear eye protection.




During operation, the surface of the pump may reach high temperatures of more than 160 deg F.

Wear protective gloves, stay clear of the pump. Risk of Burns!

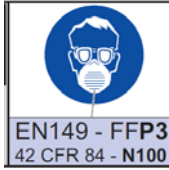

Increased risk of damage to health may be a concern when changing contaminated oil. Personal protective equipment must be worn during the changing of contaminated oil. Contaminated oil is special waste and must be disposed of separately in compliance with applicable regulations.

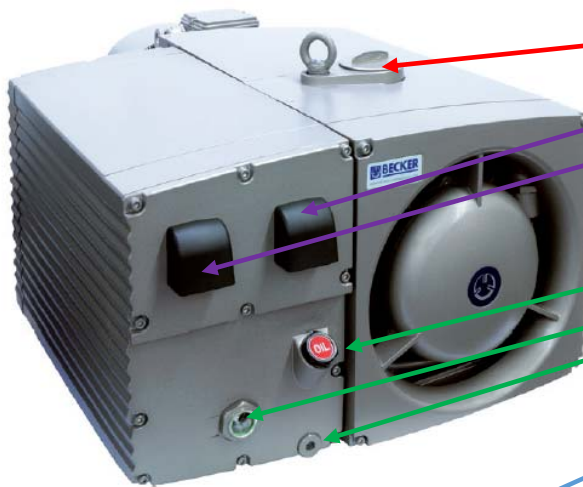

1.) Vacuum connection



2.) Exhaust air vents and/or exhaust ports. (Check port dimensions specified for type of lubricated pump model).

3.) Oil filler cap  
Oil sight glass  
Screw plug oil drain

4.) Arrows to indicate correct rotation of motor/fan: (counterclockwise)

5.) Internals of the pumps show filters/separators:

- F: external inlet filter element
- E2: oil filter
- H1-2: oil separator(s)
- G: filter on the gas ballast
- I1-4: coarse separator
- E1-4: Oil fill port, sight glass, oil drain port

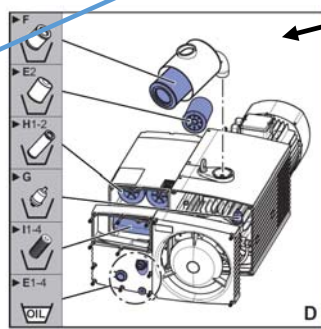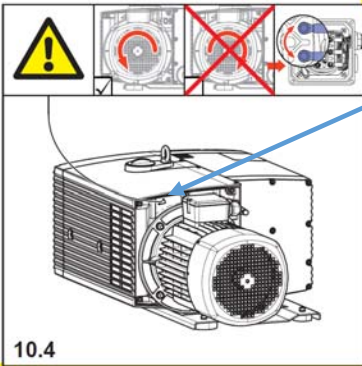

When servicing the pump, the pump must be turned off. The motor must be disconnected from the main electrical source by a qualified electrician so that it cannot be started up again accidentally. Follow proper lockout/tag-out procedures.

**BECKER**  
 D-42279 Wuppertal  
 www.becker-international.com

year

No.

CE type

frequency  Hz

speed  min<sup>-1</sup>

power required  kW

inlet capacity  m<sup>3</sup>/h

max. vacuum **MAX. VACUUM** mbar

Made in  Germany

On every pump there will be the **pump nameplate**. It will state: the year the pump was manufactured, the serial number of the pump, the type of pump, frequency, rpm, kW (motor HP), volumetric flow inlet capacity, and the max vacuum. The data sheet will also provide this information.

**BECKER** Mat.Nr. XXXXXX ENXXXX CE



3~Mot. XXXXXXXX

NoUD XXXXXX XX

<b>50 Hz</b> XXKW	<b>60 Hz</b> XXKW
XXX-XXX / XXX-XXX V Δ IY	XXX-XXX / XXX-XXX V Δ IY
XX-XX / XX-XX A	XX-XX / XX-XX A
cos φ 0.XX-0,XX	cos φ 0.XX-0,XX
XXXX-XXXX /min	XXXX-XXXX /min


XX kg

On every motor there will be the **motor nameplate**. It will state the motor electrical information with kW, Hz, voltage, amps, speed, with the wiring diagram on the motor nameplate or inside the motor box, IP rating, UL/CSA recognition, and operating mode (S1).

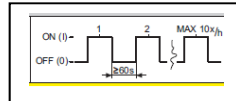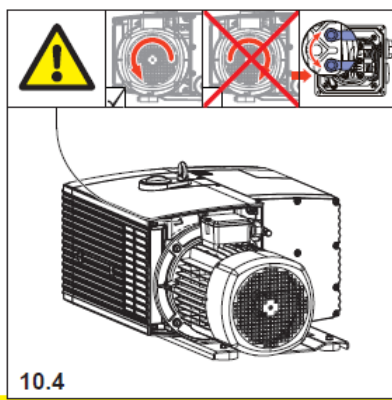

Locate the arrows that indicate correct rotation of motor/fan after electrical hook-up. Do **not reverse rotation** of the pump, this will spin the vanes backwards incorrectly and possibly break or chip vanes. **Bump** the drive motor and watch the fan wheel to determine the direction.

The pump should **not** be switched on/off more frequently than 3 times/hour or 6 times/hour if using a soft start or frequency drive.. This may lead to excess temperature limit of the motor winding and the bearings.

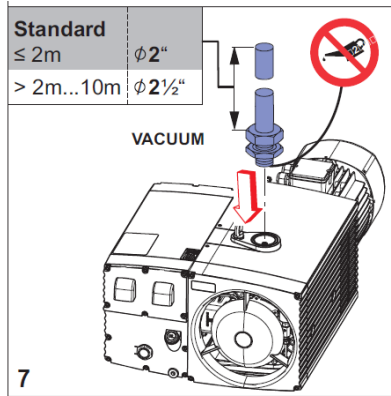


Flexible pipe should be used for pipe connections at an angle. This will prevent pipe line cracks/breakage/damage.




Proper sizing of pipe diameter should not restrict inlet. Piping diameter should be at least the same size as the inlet port size for up to 30 meters (98 ft of equivalent length). Larger pipe diameters should be used for longer equivalent lengths.

An external check valve 1x should be used to prevent reverse operation when there is vacuum in the line, due to the process stopping, pipeline closed and/or also when two or more pumps are inline.


Do not use oil on threads of the piping.

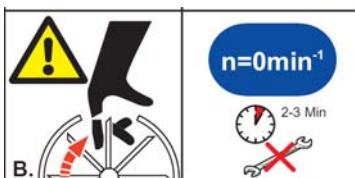



Caution: rotating unit. Do not work on the pump/motor until it is idle with no rotation. This may take up to 3 minutes. Follow proper lockout/tag-out procedures.

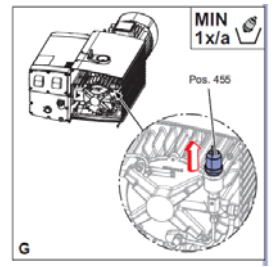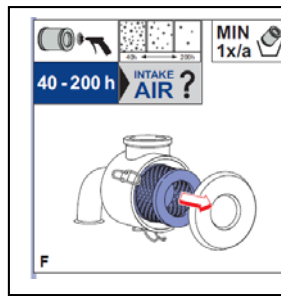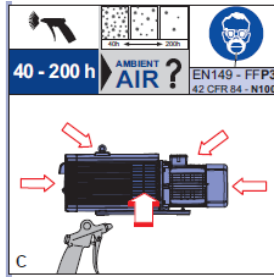



The outside shroud of the pump should be blown with compressed air every 40 – 200 hours. (Squirrel cage fan of the pump, motor fan, motor fins, top and sides of the pump and motor). Filter/elements, the external inlet filter and the gas ballast filter should be checked between 40-200 hours. The elements should be blown with compressed air from the inside out. Blast air should be felt coming through the filter/element. The element needs to be replaced if dirty or clogged. **Use only Becker Genuine filters to maintain warranty protection.**

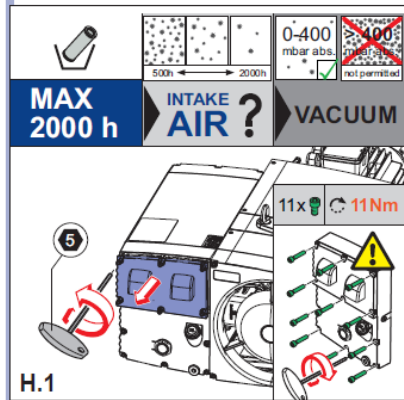



- After 2000 hours of run time on the pump, (H1) the oil separator/s behind the exhaust ports should be maintained. The running vacuum level of the pump should be above 0.6 bar relative (= 400 mbar absolute) or above 18"HgV.
- This maintenance schedule is dependent on running vacuum level and how much air has been pulled through the oil separators.
- To open exhaust port location area, remove plastic end cover. Be mindful of the 11 Nm torque specs on bolts.
- Extending past the max 2000 hour maintenance schedule for the separator/s causing a lack of performance due to thickening/caramelizing oil. This may become a concern/possible fire hazard.
- Orientate the separator/s with the key lock facing downward.

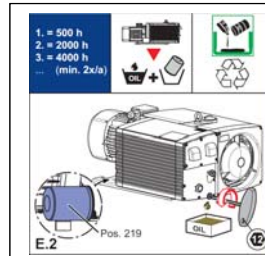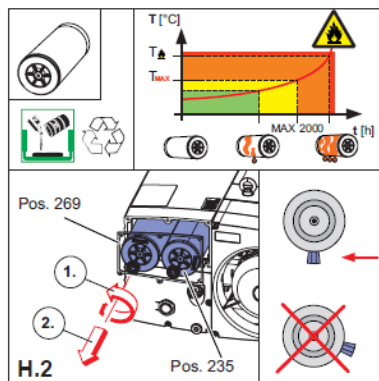

- Check oil level every 40 hours. Maintain oil and **oil filter** (position E219) with initial check at 500 hours and every 500 hours thereafter, determining a maintenance schedule.

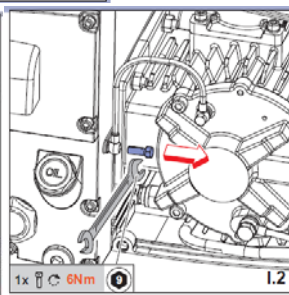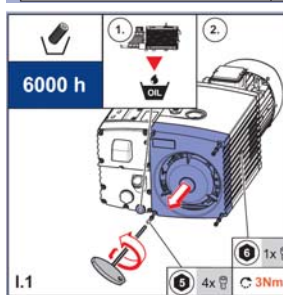

- After 6000 hours and during a regular oil change, the oil return pipe and coarse separator must be maintained. Remove the air guide hood as shown in I.1. Unbolt the hollow holding screw to detach the oil return pipe. Blow out debris/unclogging any restriction in this line. If not clean, this may cause the oil float chamber to overflow.
- Remove the maintenance cover shown in I.3. The coarse separator will need to be replaced. Check the proper part number for the specific pump type.
- Be mindful of torque specs on bolts.

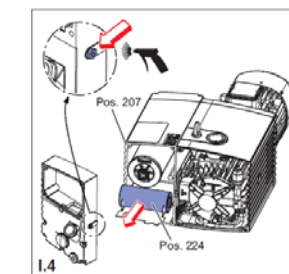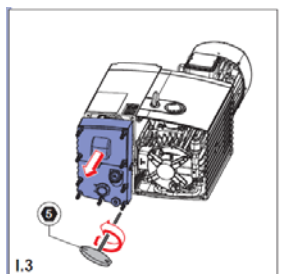

## ASK ABOUT OUR MOBILE SERVICE



**Use Only Becker Genuine Replacement Parts To Maintain  
Warranty Protection!**

### Available Spare Parts/Accessories



#### Maintenance Kit— Visit Our Store for Part #'s

Use the Becker Genuine Maintenance Kit to maintain your warranty and to increase the longevity and performance of your Becker Rotary Vane Pumps. Each of these components is engineered specifically for this pump. The kit includes Becker Genuine oil, oil filter, oil separation element, oil separation gasket, gas ballast filter. Keep an extra kit on the shelf to ensure you have all of the components on hand for regularly scheduled maintenance.



#### BPC Clear Filters

Use an inline see through canister filter with paper filter element that removes 99% of particles down to 2 micron and connects easily on to the Becker Check Valve Assembly. Eliminates the need for removing the filter cover on the pump and allows for visual inspection of the filter element preventing any interruption in the vacuum process.



#### Check Valve Kit/Gauge

The Check Valve Kit comes complete with all parts necessary to connect to the pump. Liquid filled 0-30" Hg vacuum gauge with 2-1/2" face, 1/4" center back mount easily fits onto the Check Valve Kit piping.

**Visit Our Store To See All Available Parts & Accessories!**

[www.beckerpumps.com/shop](http://www.beckerpumps.com/shop)